


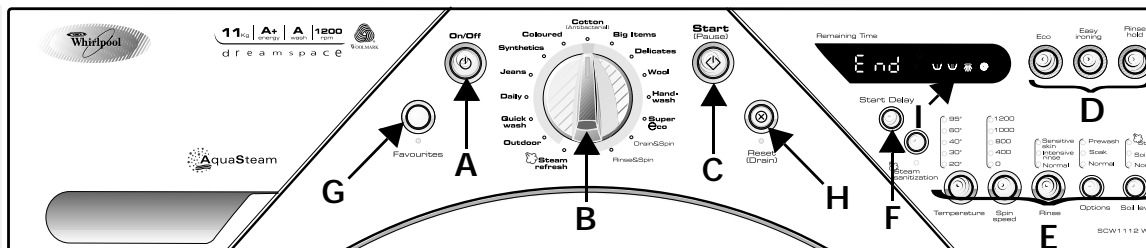

- A. "On/Off" button
- B. Programme selector
- C. "Start (Pause)" button
- D. Option buttons
- E. Modifiers
- F. "Start delay" button
- G. "Favourites" button
- H. "Reset (Drain)" button



- I. Programme sequence indicator (on display)
- Selecting any option/modifier, the indication lights up. When the combination of programme, additional options/modifiers and temperature is not possible, the indication lights switch off automatically and a signal sounds.
- *: optional / Yes: dosing required.

Programme	Care labels	Type of wash/Notes <i>- Respect the manufacturer's recommendations on the care label.</i>	Max. Load kg	Detergent and additives			Special Options and Modifiers										Max. Spin Speed rpm	Temperature °C
				Pre-wash	Main wash	Softener	Start delay	Eco	Easy ironing	Rinse hold	Steam sanitization 2)	Rinse sensitive skin	Intensive rinse	Pre-wash	Soak	Steam Soiled		
Cotton (Antibacterial)		Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. At a temperature of 95°C, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	11.0	*	Yes	*	*	*	*	*	*	*	*	*	*	*	1200	20 to 95
Coloured		Slightly to normally soiled bed linen, table linen, shirts, trousers etc. made of cotton and linen.	10.0	*	Yes	*	*	*	*	*	*	*	*	*	*	*	1200	20 to 40
Synthetics		Slightly to normally soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	5.5	*	Yes	*	*	*	*	*	*	*	*	*	*	*	1000 ¹⁾	20 to 60
Jeans		Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.	11.0	*	Yes	*	*	*	—	*	—	*	*	*	*	*	1200	20 to 60
Daily		Programme for slightly to normally soiled fabrics made of cotton and/or synthetic fibres.	6.0	—	Yes	*	*	*	*	*	—	*	*	—	—	—	1200	20 to 60
Quick wash		Slightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton.	6.0	—	Yes	*	*	—	—	—	—	*	*	—	—	—	1200	20 to 30
Outdoor		Normally soiled and sweaty sportswear made of cotton jersey or microfibres. This programme includes a prewash cycle - you can add detergent also to the prewash chamber. Do not add any softener.	5.5	*	Yes	—	*	—	—	*	—	*	*	*	*	—	1000 ¹⁾	20 to 60
Steam refresh		Clean and dry laundry items made of cotton and/or synthetics which were already used. Refreshes, reduces smells, moderates creasing and makes the items ready to wear or use within 20 minutes. After programme end, immediately put the laundry on hangers for 10 minutes before using.	2.0	—	—	—	*	—	—	—	—	—	—	—	—	—	—	—
Big items		Blankets made of synthetic fibres, bedcovers filled with polyester or other artificial fibres, sleeping bags, bathmats and similar items.	4.0	*	Yes	*	*	*	—	*	—	*	*	*	*	*	1000 ¹⁾	20 to 95
Delicates		Curtains and delicate dresses, skirts, shirts and blouses.	4.0	*	Yes	*	*	—	*	*	—	*	*	*	*	—	1000 ¹⁾	20 to 40
Wool		Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	3.0	—	Yes	*	*	—	—	*	—	*	*	—	—	—	1000 ¹⁾	20 to 40
Handwash		Textiles made of silk, linen, wool and viscose marked as "handwashable". If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.	3.0	—	Yes	*	*	—	—	*	—	*	*	—	—	—	800 ¹⁾	20 to 30
Super Eco		Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and/or linen. Offers highest economy in energy consumption by prolonged wash duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, select "Rinse hold" option and start spinning in the morning, or define programme start with "Start Delay" accordingly.	11.0	—	Yes	*	*	—	—	*	—	*	*	—	—	—	1200	20 to 60
Rinse & Spin	—	Same as the last rinse and the final spin in the "Coloured" programme.	11.0	—	—	*	*	—	—	—	—	*	*	—	—	—	1200	—
Drain & Spin	—	Use this programme to drain your washer or to drain and spin your wash load. Delicate fabrics, handwashables and woollens should be drained with no spin or low spin speed to avoid fabric stress.	11.0	—	—	—	*	—	—	—	—	—	—	—	—	—	1200	—

1) For improved garment care, spin speed is restricted in these programmes.
2) Only selectable within the temperature range of 40 to 60 °C.

The wool cycle of this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0805



CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approximate programme duration* (hours : minutes)
Cotton (Antibacterial)	95	11.0	95**	3.38	3:10
Cotton with "Eco"***	60	11.0	89	1.87	2:43
Cotton	60	11.0	89.2	1.92	2:15
Cotton	60	5.5	55	1.22	1:40
Cotton	60	3.5	45.5	1.03	1:25
Cotton	60	1.0	35	0.73	1:00
Coloured	40	10.0	82	0.89	2:13
Coloured	40	5.5	57	0.69	1:39
Coloured	40	3.5	43.3	0.58	1:27
Coloured	40	1.0	26.1	0.39	0:40
Synthetics	40	5.5	53.1	0.62	1:35
Synthetics	40	3.0	42.1	0.60	1:23
Jeans	40	11.0	117.5	0.97	2:00
Daily	40	6.0	60.9	0.81	1:00
Quick wash	30	6.0	43.8	0.44	0:30
Outdoor	30	5.5	61.3	0.51	1:31
Steam refresh	—	2.0	0.5	0.26	0:20
Big items	40	4.0	83.7	0.83	1:18
Delicates	30	4.0	79.6	0.50	0:52
Wool	40	3.0	68.6	0.78	0:43
Handwash	30	3.0	97	0.49	0:38
Super Eco	60	11.0	96.1	1.54	5:09

Prewash cycle increases programme duration by approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

** The remaining time indicator can deviate from the values in the table, because it takes into account the operating conditions at that time.

*** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Reference programme for energy label (Cotton 60° with "Eco" and default settings).

ADD DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter "Detergent and Additives" in your Instructions for Use.

- Press **"On/Off"** ; the button light comes on. The light of the selected programme is on, and the **"Start (Pause)"** button blinks.
- Turn the **programme selector** to the desired programme - it is marked by a light.
- The predefined **temperature** and **spin speed** can be altered by pressing the **"Temperature"** and the **"Spin speed"** modifier.

SELECT ANY DESIRED OPTION OR MODIFIER

Selecting any option or modifier, the indication lights up. If the combination of programme, options or modifiers is not possible, the indication lights switch off automatically and a signal sounds.

"Eco" button

- The duration of the wash is extended and the temperature reduced. This saves you energy and maintains good washing results.

"Easy ironing" button

- Reduces creasing by an increased water quantity and a very gentle spin.

"Rinse hold" button

- The laundry remains in the last rinse water without being spun: this prevents creasing and colours from changing.
- This option is particularly recommended for the programme "Synthetics" or "Delicates".
- Particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

- Do not leave the laundry to soak in the rinse hold for too long.

Note: The programme starts to "Rinse hold" as soon as the "Rinse hold" button light blinks; the **"Start (Pause)"** button also blinks.

Terminate the "Rinse hold" option:

- Press either the "Rinse hold" button or the **"Start (Pause)"** button - the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, press and hold the **"Reset (Drain)"** button to start the "Drain" programme. The water is drained out then, before the door can be opened.

"Steam Sanitization" button

- Eliminates bacteria and helps sanitizing the laundry.
- Appropriate for cotton and/or synthetic laundry items with care label within temperature range of 40 to 60°C and up to a maximum load of 7 kg.
- If you exceed the maximum load of 7kg, the sanitizing effect is not ensured - in this case the "Steam Sanitization" button light goes off approximately 20 minutes after programme start.

"Spin speed" modifier

- Every programme has an automatic predefined spin speed.
- Press the button to set another spin speed.
- Spin speed "0" is only selectable for programme "Spin & Drain"; the final spinning is cancelled in this case - the water is drained out only at the end of the programme.

"Rinse" modifier

- "Sensitive skin": maximum amount of rinse water is added, and rinse cycle is prolonged.
- "Intensive rinse": more rinse water is added, and rinse cycle is prolonged.
- Particularly suitable for areas with very soft water, for baby clothes or to help people with skin allergies.

"Options" modifier

➔ Prewash

- Add a prewash cycle to the programme selected.
- Use only for heavily soiled loads (e.g. sand, granular dirt).
- Increases the cycle time by approx. 15 minutes.
- Do not use liquid detergent for the main wash when activating "Prewash".

➔ Soak

- For heavily soiled laundry with set-in stains.
- The programme time increases by approximately 15 minutes.
- Do not use liquid detergent for the main wash when activating the "Soak" option.
- Select the desired wash cycle and "Soak" option, add detergent to the "Prewash" (maximum half of the detergent amount recommended by the manufacturer) and the Main Wash chamber of the detergent dispenser and press **"Start (Pause)"**.

➔ Normal

"Soil level" modifier

- Adapts the programme duration to the soil level of your laundry.
- Soil level "Steam" treats the laundry with hot steam during the wash cycle in order to help removing stains.

SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the washing machine offers the possibility to save one setting for each programme so that it can be used again by just pushing one button.

- Select the desired programme, temperature, spin speed and options/modifiers.

Press and hold the **"Favourites"** button for a few seconds; the light goes on and a signal sounds when the programme setting is saved. Next time you want to use your individual programme setting, turn the programme selector to the desired programme, **shortly** push the **"Favourites"** button and start by pressing **"Start (Pause)"** .

If you want to replace the saved setting by another one:

- Select the programme desired and the new temperature, spin, options/modifier setting.
- Press and hold the **"Favourites"** button for a few seconds; as soon as the signal sounds and the light goes on, the previously saved setting is replaced by the new one.

START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options/modifiers as desired.
- Press the "Start delay" button to select the delay time from 1 to 24 hours.
- Press and hold the **"Start (Pause)"** button ; the countdown of the delay time begins. The light of the "Start delay" button will keep blinking until the programme starts.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.

To cancel the "Start delay":

- Press **"Reset (Drain)"** for at least 3 seconds, or just press the **"Start (Pause)"** button once - the delay time will disappear from the display after a few seconds.

PROGRAMME START

Turn on the tap and press and hold the **"Start (Pause)"** button - the button's light stops blinking and goes on; it will take some time until water enters into the washing machine.

The programme sequence indicator on the display shows the sequence reached in the programme. After starting the programme, the indication runs from left to right through prewash, wash, rinse, spin. When a programme sequence is finished, the corresponding symbol goes off. The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, an animation appears on the display and the "6th Sense" symbol lights up.

ADD WASHING/DOOR LOCK

As soon as a programme starts, the "Door locked" symbol lights up on the display.

You can interrupt the programme by pressing **"Start (Pause)"** - the light blinks. The "Door locked" symbol on the display goes off and you can open the door. In certain programme phases, the "Door locked" symbol remains lit to show that the door cannot be opened in the present programme phase, e.g. when the water level is too high or during spinning.

As long as the "Add garment" symbol on the display lights up, you can still add more washing; interrupt the programme by pressing and holding **"Start (Pause)"** , open the door, add your washing, close the door and press and hold **"Start (Pause)"** to continue the programme.

PROGRAMME END

"End" appears on the display, and a signal sounds.

- Switch the machine off by pressing **"On/Off"** .
- Turn off the tap and open the door to unload your washing. Leave the door open for some time so that the washer's inside can dry.

CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

- Press the **"Start (Pause)"** button to interrupt the programme. The light blinks.
- Select the new programme, temperature and options / modifiers as desired.
- Press and hold the **"Start (Pause)"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME BEFORE THE END

Press and hold the **"Reset (Drain)"** button for a few seconds; the light blinks. It will take some time until any existing water is drained out and the door can be opened (up to 10 minutes). Caution, the washing could still be hot!