



# How to use the appliance

Further indications are given in the single chapters and in the user instructions.


**Switch on the appliance**

Press the **ON / OFF** button.

**Select, save, and supply the detergent**

**(The first time you use the appliance and when using a different type of detergent)**

1. Select the third programme from the top in the relative table.
2. Press the Start button for about 7 seconds until the display changes.
3. Select the required detergent with the Start button (OFF = powder detergent, 2 in 1, 3 in 1, 4 in 1) (shown on the display).
4. Switch the appliance off and then switch it on again. The selected detergent type will be shown on the display for approximately 3 seconds after switching on.

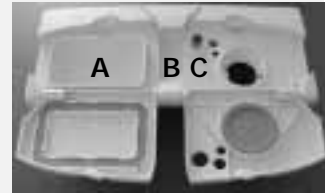

For dosage of powder detergent in compartment **A** and **B** refer to the programmes table.

**Check the rinse aid level**

Mechanical indicator **C**.  
Electric indicator on control panel (if provided).

**Check the regeneration salt level**

**On models with water softener system only.**  
Mechanical indicator **D**. Electric indicator on control panel (if provided).



**Load the racks**

Refer to the dishwasher loading instructions.

**Close the dishwasher door, turn on the water tap**

**Select a programme**

The last programme selected will light up.  
Select the desired programme (using the specific button or knob).  
The corresponding indicator lamp lights up.

**Select additional options**

If necessary (and if provided).  
The corresponding indicator lamp lights up.

**Press the Start button**

The selected programme is then memorised (even in the event of power failure).

**“Change programme in progress”**

- Press the **START** button for 2 sec. until the Start indicator lamp switches off.
- Select another programme and press the **START** button again.

**Wash cycle**

- Only open the dishwasher if necessary (Warning: beware of hot steam).
- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted.

**Switch off the appliance**

Only after the **START** button has switched off: Press the **ON / OFF** button. All the indicator lamps switch off.

**Turn off the water tap, unload the racks**

**Warning: When the door is opened steam comes out!**  
Unload the appliance, starting from the lower rack.

# Dishwasher loading instructions and racks provided

depending on the model

## Upper rack:

### Crockery holder (A):

Depending on the position, for long-handled utensils, cups and plates.

### Glass holder (B):

Long-stemmed glasses.

**Long-handled utensils (e.g. carving forks, knives) must be arranged with the sharp end facing in towards the appliance.**

### Half Load:

Load the upper rack (see description of Options). Place the cutlery basket (C), if provided, in the upper rack.

### Rack height adjustment (also when loaded):




#### Lower adjustment:

Pull the **two** rack handles (D) outwards and lower the rack.

#### Upper adjustment:

Pull the **two** rack handles (D) upwards until the rack clicks into place (factory setting).

The rack must be level on both sides.

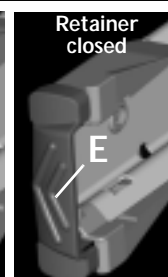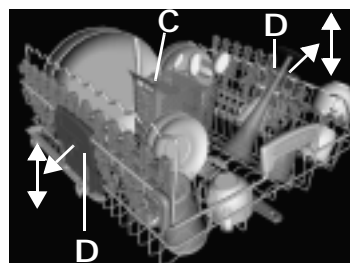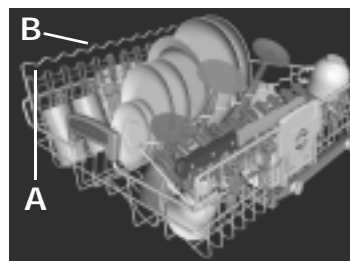

### Removing the top rack to provide clearance for large items of crockery in the bottom rack:

Open the rack guide retainers (E) on the right and left and remove the top rack.

When the upper rack is in place the retainers must always be closed.

## Lower rack:

Depending on the model with fixed, tilting (F) or tilting split plate holders (G).

### Half Load:


Load the lower rack (see description of Options).

Greater washing power, particularly for plates and saucepans.



### Power Clean load



Increased wash power in the dedicated area (H) and high flexibility for lower rack loading.

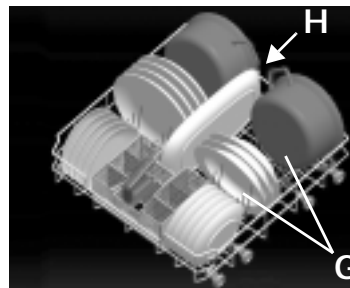

## Cutlery basket (I):

Grid (J) to keep items separate.

**Sharp knives and forks that might cause injury must be placed in the cutlery basket with the sharp end facing downwards.**

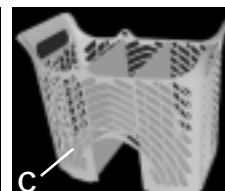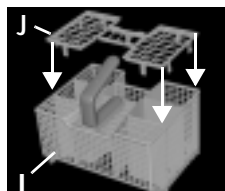

Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, tin, hand-decorated crockery (unglazed), silver cutlery.

## What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (\* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
<b>The appliance is not working</b>	<ul style="list-style-type: none"> <li>• No water supply.</li> <li>• The appliance does not load sufficient water.</li> <li>• There is a power failure.</li> <li>• Starting the selected programme.</li> </ul>	<ul style="list-style-type: none"> <li>• Open the tap.</li> <li>• Clean the water supply tap filter.</li> <li>• Ensure there are no kinks in the water hose.</li> <li>• Insert the plug into the mains socket.</li> <li>• Press the Start button.</li> <li>• Close the door.</li> <li>• Check the safety circuit breaker.</li> <li>• The programme can be set to "0" to start.</li> </ul>
<b>If crockery is not perfectly dry</b>	<ul style="list-style-type: none"> <li>• Insufficient rinse aid.</li> <li>• Residual water in cavities.</li> </ul>	<ul style="list-style-type: none"> <li>• Increase dosage *.</li> <li>• Load crockery at an angle.</li> </ul>
<b>If crockery is not perfectly clean</b>	<ul style="list-style-type: none"> <li>• The water jet does not reach the crockery.</li> <li>• Insufficient detergent.</li> <li>• Unsuitable programme.</li> <li>• Spray arms blocked.</li> <li>• Spray arm nozzles clogged.</li> <li>• Incorrect detergent/detergent too old.</li> </ul>	<ul style="list-style-type: none"> <li>• Arrange crockery so that items do not touch each other. Load crockery upside down.</li> <li>• Follow recommended detergent dosage.</li> <li>• Select a more intense wash cycle.</li> <li>• The spray arms must be able to turn freely.</li> <li>• Remove any impurities obstructing the water flow *.</li> <li>• Use a good quality detergent.</li> </ul>
<b>Sandy or grainy residues</b>	<ul style="list-style-type: none"> <li>• Clogged filters.</li> <li>• Filters incorrectly assembled.</li> </ul>	<ul style="list-style-type: none"> <li>• Check filters regularly/if necessary clean *.</li> <li>• Insert the filter correctly *.</li> </ul>
<b>Colour of plastic parts faded</b>	<ul style="list-style-type: none"> <li>• Tomato/carrot juice, ...</li> </ul>	<ul style="list-style-type: none"> <li>• Depending on the material, if necessary use a detergent with a greater whitening power.</li> </ul>
<b>Deposits on crockery</b>		
<ul style="list-style-type: none"> <li>• Removable</li> <li>• Not removable</li> </ul>	<ul style="list-style-type: none"> <li>• Streaks on the crockery/glasses.</li> <li>• Streaks on glasses.</li> <li>• Layer of salt on crockery/glasses.</li> <li>• Insufficient water softening, calcium deposits.</li> </ul>	<ul style="list-style-type: none"> <li>• Increase the rinse aid dosage *.</li> <li>• Reduce the rinse aid dosage *.</li> <li>• Close the salt container lid properly *.</li> <li>• Change water hardness setting, if necessary add salt *.</li> </ul>
<b>Opaque glasses/ glasses not sparkling</b>	<ul style="list-style-type: none"> <li>• Cannot be washed in the dishwasher.</li> </ul>	<ul style="list-style-type: none"> <li>• Use suitable glasses.</li> </ul>
<b>Rust on cutlery</b>	<ul style="list-style-type: none"> <li>• Not made of stainless steel.</li> </ul>	<ul style="list-style-type: none"> <li>• Use suitable cutlery.</li> </ul>
<b>Identifying appliance faults</b>	<ul style="list-style-type: none"> <li>• The START indicator lamp flashes.</li> <li>• Indicator F... (if provided).</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the filter assembly is not clogged and that there is no interruption to the water supply (if necessary, clean the filters *). Start the programme again. Press the START button for 2 seconds, until the START indicator lamp switches off. Select a new programme and press the Start button again.</li> </ul>

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault
- The appliance type and model
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.




Before using the dishwasher, read the user instructions!

ADP 8800

# Quick Reference Guide

GB

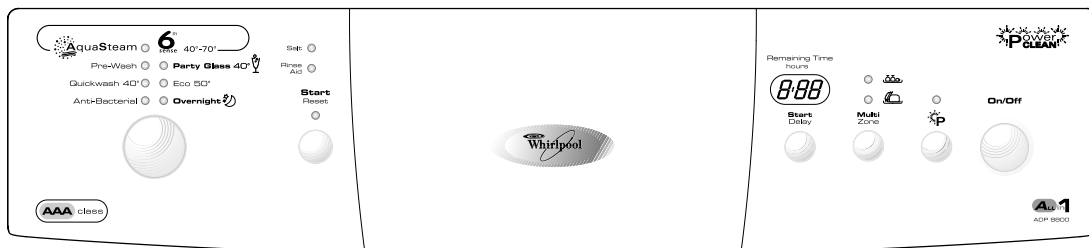

On/Off

Programme selection button



On / Off button

Start  
Reset



Start button

Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.



## Indicators

Salt



Add regeneration salt

Only add regeneration salt immediately before starting a wash programme.

Rinse  
Aid



Add rinse aid

## Options <sup>3)</sup>

Remaining Time  
hours



Time and failure display

Indicates in hours the time remaining until the start of the wash cycle. Switches off when the programme starts and indicates the time remaining in hours and minutes.

"F..." Identification of faults for service technician

Start  
Delay



"Delayed start" button

The wash cycle can be programmed to start after 1 - 24 hours. With each successive touch of the button, the delayed start indicator increases by 1 hour, and after 24 returns to 00. Then press the Start button. The dishwasher will start at the set time.



Multi  
Zone



"Half load - Multizone" button

Load the upper or lower rack only.

This function can be used with any programme.

Press once = upper rack (the symbol comes on).

Press twice = lower rack (the symbol comes on).

Press 3 times = Off (half load function deactivated).

When washing without the top rack, press the "Half Load" button twice, or "Lower rack wash" (relative symbol lights up).

Power  
Clean



Power Clean <sup>6)</sup>

An increased pressure combined with additional spray level offers better cleaning result and more flexibility of dish loading in the lower rack.

Programme chart				Detergent <sup>2)</sup>		Consumption <sup>3)</sup>		
Programmes		Loading instructions		A	B	Litres	kWh	Minutes
<b>6<sup>th</sup> AquaSteam</b>	<b>AquaSteam <sup>6)</sup></b>	<b>40-70°C</b>	Lightly, normally or heavily soiled crockery, including pots and pans.	X	X	7-17	0.99-1.75	65-220
<b>Pre-Wash</b>	<b>Pre-Wash</b>	<b>cold</b>	Crockery to be washed later.	-	-	4.0	0.03	14
<b>Party Glass</b>	<b>Party Glass</b>	<b>40°C</b>	Light soiling, for example glasses and cups.	X	-	10.0	0.85	100
<b>Quickwash</b>	<b>Quickwash</b>	<b>40°C</b>	Lightly soiled crockery with no dried-on food.	X	-	10.0	0.65	30
<b>Eco</b>	<b>Eco <sup>1) 6)</sup></b>	<b>50°C</b>	Normally soiled crockery.	X	X	13.0	1.05	170
<b>Anti-Bacterial</b>	<b>Anti-Bacterial <sup>4) 5) 6)</sup></b>		Normally or heavily soiled crockery, with additional antibacterial action.	X	X	13.0	1.50	115
<b>Overnight</b>	<b>Overnight</b>	<b>55°C</b>	Normally soiled crockery, gentle and quiet programme thanks to the low spray pressure (39dbA).	X	X	13.0	1.20	290

1) Reference programme for energy label EN 50242.

2) Refer to "User instructions".

3) The data relevant to programmes are values obtained in the laboratory in conformity with Standard EN 50242. In practice there may be time variations or leaps depending on different loads, function options, sensor calibration (only for sensor-controlled programmes) water temperatures or hardness and different power supply voltages.

4) The bacteria removal efficiency has been tested by the Institut Pasteur de Lille (France), based on the NF EN 13697 standard of November 2001;

5) Programme interruption (e.g. the door being opened) may compromise the result of the antibacterial rinse;

6) These programmes can be used with the "Power Clean" option.

Important information for Test Laboratories:

For detailed information on the EN comparison test and other tests, contact the following address: "nk\_customer@whirlpool.com".

Whirlpool is a registered trademark of Whirlpool USA

**5019 396 01603**  
(We reserve the right to make technical modifications)