

How to use the appliance

 
Further indications are given in the single chapters and in the user instructions.

Open the door, switch on the appliance

Press the **ON** button.

How to fill the detergent dispenser

Compartment **A**:
With each wash cycle.
Compartment **B**:
For programmes with pre-wash only.
If using combined action dishwasher tabs, follow the user instructions!

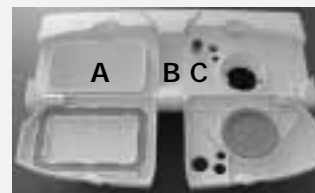

Check the rinse aid level

Mechanical indicator **C**.
Electric indicator on control panel (if provided).

Check the regeneration salt level

On models with water softener system only.
Mechanical indicator **D**. Electric indicator on control panel (if provided).



Load the racks

Refer to the dishwasher loading instructions.

Select a programme

The last programme selected will light up.
Press the button until the desired programme lights up.

Select options

If necessary (and if provided) the corresponding indicator lamp lights up.

Press the Start button

The selected programme is then memorised (even in the event of power failure).

“Change programme in progress”

- Press the **START** button for 2 sec. until the Start indicator lamp switches off;
- Select another programme and press the **START** button again.

Turn on the water tap close the dishwasher door

Wash cycle

- Only open the dishwasher if necessary (Warning: beware of hot steam).
- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted.

Switch off the appliance

At the end of the programme an acoustic signal will sound.
Only after the **START** button has switched off: press the **OFF** button.
All the indicator lamps switch off.

Turn off the water tap, unload the racks

Warning: when the door is opened steam comes out!
Unload the appliance, starting from the lower rack.

Dishwasher loading instructions and racks provided

Upper rack:

depending on the model

Multi-purpose support (A): ¹⁾

Depending on the position, for long-handled utensils, cups and glasses. May be used in three different positions.

 
Crockery holders (B):

Depending on the position, for example plates, cups and long-stemmed glasses.

Revolving glass support (C): ²⁾

Depending on the position, for example small or long-stemmed glasses.

Long-handled utensils (e.g. carving forks, knives) must be arranged with the sharp end facing in towards the appliance.

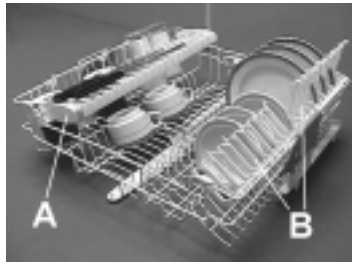

Half Load:

Load the upper rack (see description of Options).

Place the cutlery basket (D) in the upper rack.

Rack height adjustment (also when loaded):

 
 
 
- **Lower adjustment:** pull out the two rack handles outwards (E) and lower the rack.
- **Upper adjustment:** pull the two handles (E) upwards until the rack clicks into place (Factory setting).

The rack must be level on both sides.

Removing the top rack to provide clearance for large items of crockery in the bottom rack:

Open the rack guide retainers (F) on the right and left and remove the top rack.

When the upper rack is in place the retainers must always be closed.

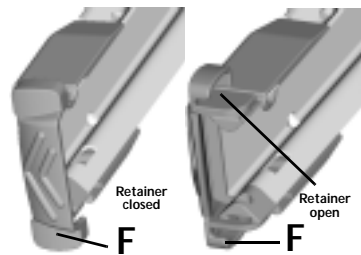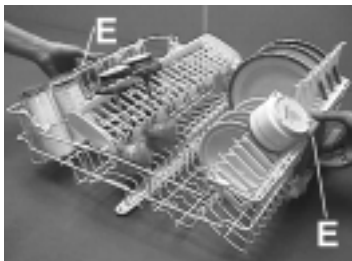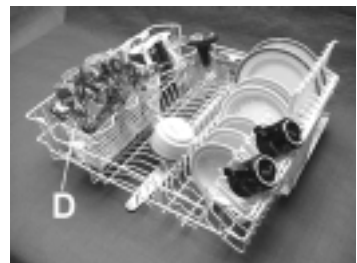


Lower rack:

Depending on the model with fixed or tilting plate holders (G).

Half Load:

Load the lower rack (see description of Options).

 Greater washing power, particularly for plates and saucepans.


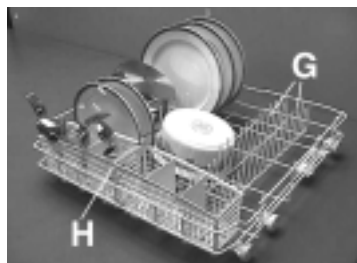


Cutlery basket (J) or (H):

Some models are provided with a grid (I) that can be fitted onto the cutlery basket to keep items separated.

Cutlery basket (D), if provided, for appliances with half load only.

  Sharp knives and forks that might cause injury must be placed in the cutlery basket with the sharp end facing downwards.

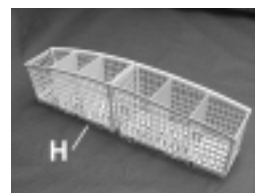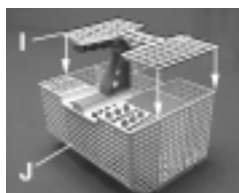

Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery. Spare parts which are sold separately:

¹⁾ Multi-purpose support (A) - N. AMH 369 series.

²⁾ Revolving glass support (C) - N. WGH 1000 series.

What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
The appliance is not working	<ul style="list-style-type: none"> • No water supply. • The appliance does not load sufficient water. • There is a power failure. • Starting the selected programme. 	<ul style="list-style-type: none"> • Open the tap. • Clean the water supply tap filter. • Ensure there are no kinks in the water hose. • Insert the plug into the mains socket. • Press the Start button. • Close the door. • Check the safety circuit breaker. • The programme can be set to "0" to start.
If crockery is not perfectly dry	<ul style="list-style-type: none"> • Insufficient rinse aid. • Residual water in cavities. 	<ul style="list-style-type: none"> • Increase dosage *. • Load crockery at an angle.
If crockery is not perfectly clean	<ul style="list-style-type: none"> • The water jet does not reach the crockery. • Insufficient detergent. • Unsuitable programme. • Spray arms blocked. • Spray arm nozzles clogged. • Incorrect detergent/detergent too old. 	<ul style="list-style-type: none"> • Arrange crockery so that items do not touch each other. Load crockery upside down. • Follow recommended detergent dosage. • Select a more intense wash cycle. • The spray arms must be able to turn freely. • Remove any impurities obstructing the water flow *. • Use a good quality detergent.
Sandy or grainy residues	<ul style="list-style-type: none"> • Clogged filters. • Filters incorrectly assembled. 	<ul style="list-style-type: none"> • Check filters regularly/if necessary clean *. • Insert the filter correctly *.
Colour of plastic parts faded	<ul style="list-style-type: none"> • Tomato/carrot juice, ... 	<ul style="list-style-type: none"> • Depending on the material, if necessary use a detergent with a greater whitening power.
Deposits on crockery		
<ul style="list-style-type: none"> • Removable • Not removable 	<ul style="list-style-type: none"> • Streaks on the crockery/glasses. • Streaks on glasses. • Layer of salt on crockery/glasses. • Insufficient water softening, calcium deposits. 	<ul style="list-style-type: none"> • Increase the rinse aid dosage *. • Reduce the rinse aid dosage *. • Close the salt container lid properly *. • Change water hardness setting, if necessary add salt *.
Opaque glasses/ glasses not sparkling	<ul style="list-style-type: none"> • Cannot be washed in the dishwasher. 	<ul style="list-style-type: none"> • Use suitable glasses.
Rust on cutlery	<ul style="list-style-type: none"> • Not made of stainless steel. 	<ul style="list-style-type: none"> • Use suitable cutlery.
Identifying appliance faults	<ul style="list-style-type: none"> • The START indicator lamp flashes. • Indicator F... (if provided). 	<ul style="list-style-type: none"> • Ensure the filter assembly is not clogged and that there is no interruption to the water supply (if necessary, clean the filters *). Start the programme again. Press the START button for 2 seconds, until the START indicator lamp switches off. Select a new programme and press the Start button again.

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault
- The appliance type and model
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.




Before using the dishwasher, read the user instructions!

ADG 7460

Quick Reference Guide

 GB



ON



OFF



Programme chart				Detergent ²⁾		Consumption ³⁾		
Programmes		Loading instructions		A	B	Litres	kWh	Minutes
	Pre-Rinse cold	Crockery to be washed later.		-	-	5.0	0.02	10
	Quickwash 40°C	Lightly soiled crockery with no dried-on food.		X	-	13.0	0.70	30
	Eco ^{1) 4)} 50°C	Normally soiled crockery.		X	X	16.0	1.05	195
	Intensive 70°C	Recommended programme for heavily soiled crockery, especially suitable for pans and saucepans.		X	X	17.0	1.65	145

1) Reference programme for energy label EN 50242;
2) Refer to "User instructions";

3) The data relevant to programmes are values obtained in the laboratory in conformity with Standard EN 50242. In practical use there may be time variations or leaps depending on different loads, function options, water temperatures or hardness and different power supply voltages.

4) Energy saving programme with prolonged drying cycle.

Important information for Test Laboratories:

For detailed information on the EN comparison test and other tests, contact the following address: "nk_customer@whirlpool.com".