


QUICK REFERENCE GUIDE

CONTROL PANEL

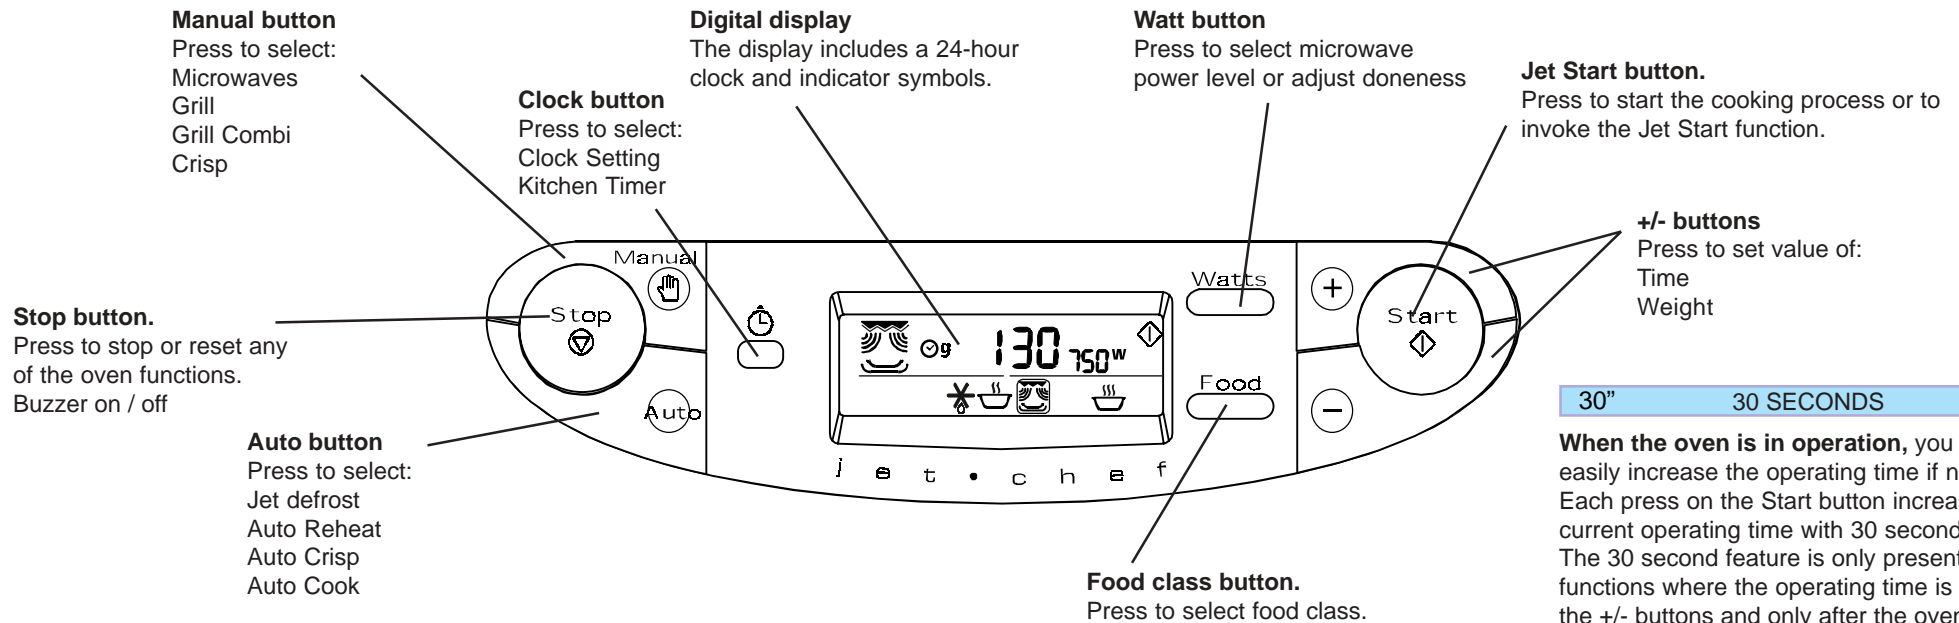

CHOOSING MICROWAVE POWER

MICROWAVES ONLY

Level	To be used for:
JET / 950 W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
750 W	Cooking of vegetables, fish, meat etc.
650 W	Cooking dishes, not possible to stir.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	Simmering stews and melting butter.
160 W	Defrosting.
90 W	Softening butter, cheese and ice cream.
0 W	Setting the standing time.

GRILL COMBI

Level	To be used for:
90 - 160 W	Fish & Fruit
160 - 350 W	Fish gratin, Chicken legs
500 - 650 W	Vegetable gratin

NOTE: Never operate the oven empty when using microwaves



MANUAL DEFROSTING

This function is used for defrosting food not included in the Jet Defrost function.

Follow the procedure for "How to cook and reheat with microwaves" and choose 160 W when defrosting manually.



KITCHEN TIMER

Use this function when you need a kitchen timer to measure exact time for various purposes such as cooking eggs, pasta or letting the dough rise before baking etc.

1. Press the clock button shortly.
2. Press the +/- buttons to set the time to measure.
3. Press the clock button again to start the kitchen timer.



JET START FUNCTION

This function is used for quick reheating of food with a high water content such as; clear soups, coffee or tea.

Press START to automatically start with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the time with 1/2 min. You may also alter the time by pressing the +/- buttons to increase or decrease the time during cooking. This button also works as a normal start button after setting a function.



BUZZER

To notify you when a function is finished, the oven beeps once a minute for 10 minutes.

This feature can be switched on or off by keeping the Stop button pressed for 3 seconds until a beep is heard.

QUICK REFERENCE GUIDE

Manual GRILL

Use this function when cooking:

- Cheese toast & Hot sandwich
- Sausages
- Grill spit
- Pommes Duchess
- Gratinated fruit

Manual GRILL COMBI

 
Use this function when cooking:

- Potato gratin
- Fish gratin
- Chicken pieces
- Lasagne
- Stuffed vegetables

Manual CRISP

Use this function to reheat and cook pizzas and other dough based food. It is also good for frying bacon and eggs, sausages, hamburgers etc.

Use oven mittens or the special Crisp handle supplied when removing the hot Crisp-plate.



AUTO AUTO FUNCTIONS

The auto functions on this oven need to know the net weight of the food. The oven will then automatically calculate the needed time to finish the defrost / cooking procedure.

If the weight is lesser or greater than recommended weight:

Use the "Cook and reheat with microwaves" to cook / defrost the food.

Note: In Auto forced air, some of the programs do not have any weight input.

Adjusting doneness

When using the Auto functions (except the Jet Defrost function), you also have the possibility to personally control the end result through the Adjust doneness feature.

This is done by selecting a higher or lower level with the WATT button.

- +
 Increases the end temperature.
-
 Decreases the end temperature.

AUTO JET DEFROST

Use this function for defrosting ONLY. Jet Defrost can only be used for very fast defrosting of frozen food belonging to the categories listed here. Use manual defrost for other food or weights not listed.

PLEASE NOTICE

To achieve perfect results it is NECESSARY to:

- Input, with the max. possible precision, the WEIGHT of the food selected.
- Turn the food when the oven prompts you to do so.

1	100 g - 2 Kg	Meat
2	100 g - 3 Kg	Poultry
3	100 g - 2 Kg	Fish
4	100 g - 2 Kg	Vegetables
5	100 g - 2 Kg	Bread



AUTO AUTO REHEAT

Use this function when reheating readymade food either frozen, chilled or room tempered.

1	250 g - 600 g	Dinner Plate
2	200 g - 800 g	Soup
3	250 g - 600 g	Frozen Portion
4	100 g - 500 g	Milk
5	200 g - 800 g	Casserole

AUTO AUTO CRISP

Use this function to quickly reheat your food from frozen to serving temperature.

1	200 g - 600 g	French - Fries
2	200 g - 500 g	Pizza, thin crust
3	300 g - 800 g	Pan Pizza
4	180 g - 450 g	Hamburgers
5	200 g - 600 g	Fish Fingers

AUTO AUTO COOK

Use this function for cooking ONLY. This function can only be used for food belonging to the categories listed here. Use "Cook & Reheat with microwaves" for other food or weights not listed.

1	200 g - 1 Kg	Baked Potatoes
2	200 g - 800 g	Fresh Vegetables
3	200 g - 800 g	Frozen Vegetables
4	200 g - 600 g	Canned Vegetables
5	90 g - 100 g	Popcorn

PLEASE NOTICE

During the cooking process the oven may stop (depending on program) and prompt you to "TURN or STIR" food.

TECHNICAL SPECIFICATION

Supply voltage	230 V/50 Hz
Rated Power Input	2200 W
Fuse	10 A
MW output power	1000 W
Grill	1300 W
	H x W x D
Outer dimensions:	380 x 500 x 502
Oven compartment:	210 x 395 x 370



4619 694 48481